



## OWNER'S MANUAL

# “SolarDOM™”

Please read this owner's manual thoroughly before operating.

MA3884VC  
MA3884NCR



MFL30374550\_03



---

# ***Contents***

www.polotak.com

***Important***

---

***Safety***

Instructions

www.polotak.com

## How the Microwave Function Works

<https://www.polotak.com/>

Contents	<b>2</b>
Important Safety Instructions	<b>~ 15</b>
Precautions	<b>16</b>
Unpacking & Installing	<b>~ 18</b>
Control Panel	<b>19</b>
Setting the Clock	<b>20</b>
Child Lock	<b>21</b>
Quick Start	<b>22</b>
Micro Power Cooking	<b>23</b>
Micro Power Level	<b>24</b>
Grill Cooking	<b>25</b>
Convection Cooking	<b>26</b>
Speed combi Cooking	<b>~ 29</b>
Speed Auto Cook	<b>~ 33</b>
Steam Cook	<b>~ 37</b>
Auto Defrost	<b>38</b>
Auto Defrosting Guide	<b>39</b>
More or Less Cooking	<b>40</b>
Deodorize	<b>41</b>

Microwaves are a form of energy similar to radio and television waves and ordinary daylight. Normally, microwaves spread outwards as they travel through the atmosphere and disappear without effect. This ovens, however, have a magnetron which is designed to make use of the energy in microwaves.

# ***Important***

---

## ***Safety*** Instructions

Electricity, supplied to the magnetron tube, is used to create microwave energy.

These microwaves enter the cooking area through openings inside the oven. A turntable or tray is located at the bottom of the oven. Microwaves cannot pass through metal walls of the oven, but they can penetrate such materials as glass, porcelain and paper, the materials out of which microwave-safe cooking dishes are constructed.

Microwaves do not heat cookware, though cooking vessels will eventually get hot from the heat generated by the food.

***A very safe appliance***

**Your oven, Solar DOM, is one of the safest of all home appliances. When the door is**

**opened, the oven automatically stops producing microwaves. Microwave energy is converted completely to heat when it enters food, leaving no "left over" energy to harm you when you eat your food.**

Microwave - safe Utensils	<b>42</b>	
Food characteristics & Microwave cooking	<b>43</b>	~
	<b>44</b>	
Questions & Answers	<b>45</b>	
Technical Specifications	<b>46</b>	

Please keep for future reference. Read and follow all instructions before using your oven to prevent the risk of fire, electric shock, personal injury, or damage when using the oven. This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

## ***Important Safe***



This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "WARNING" or "CAUTION". These word means :

**⚠ WARNING:** This symbol will alert you to hazards or unsafe practices which could cause serious bodily harm or death.

**⚠ CAUTION:** This symbol will alert you to hazards or unsafe practices which could cause bodily injury or property damage.

# ***Important Safety***

## **Instructions**

---

Please keep for future reference. Read and follow all instructions before using your oven to prevent the risk of fire, electric shock, personal injury, or damage when using the oven. This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

 **WARNING**

[www.polotak.com](http://www.polotak.com)



# ***Important Safety***

---

Instructions

**1. Do not attempt to**

www.polotak.com

---

**tamper with, or make any adjustments or repairs to the door, door seals, control panel, safety interlock switches or any other part of the oven. which involves the removal of any cover which gives protection against exposure to microwave energy. Do not operate the oven, if the door**

**seals and adjacent parts of the microwave oven are faulty. Repairs should only be undertaken by a qualified service technician.**

- ◆ Unlike other appliances, the microwave oven is high-voltage and high-current equipment. Improper use or repair could result in harmful exposure to excessive

# ***Important Safety***

---

## Instructions

microwave energy or an electric shock.

- 2. Do not use the oven for the purpose of dehumidification. (ex. Operating the microwave oven with the wet newspapers, clothes, toys, electric devices, pet or child etc.) The microwave oven is intended for heating food and beverages. Drying of food or clothing and**

**heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.**

- ◆ It can be the cause of serious damage of safety such as a fire, a burn or a sudden death due to an electric shock.

---

Please keep for future reference. Read and follow all instructions before using your oven to prevent the risk of fire, electric shock, personal injury, or damage when using the oven. This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

 **WARNING**

[www.polotak.com](http://www.polotak.com)

# ***Important Safety***

---

Instructions

## **3. The appliance and its**

[www.polotak.com](http://www.polotak.com)

---

**accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.**

**4. The appliance is not intended for use by young children or infirm persons. Only allow**

**children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.**

- ◆ **Improper use may cause the damage of safety concerns such as a fire, an electric shock and a burn.**

# ***Important Safety***

---

## Instructions

**5. Accessible parts may become hot during use. Young children should be kept away.**

**the plastic wrapping from food before cooking or defrosting. Note though that in some cases food should be**

Please keep for future reference. Read and follow all instructions before using your oven to prevent the risk of fire, electric shock, personal injury, or damage when using the oven. This guide does not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

◆ They may get a burn.

**6. Liquids or other foods must not be heated in sealed containers since they are liable to explode. Remove**

**covered with plastic film, for heating or cooking.**

◆ They could burst.

 **WARNING**

[www.polotak.com](http://www.polotak.com)



# ***Important Safety***

---

Instructions

**7. This appliance is not**

[www.polotak.com](http://www.polotak.com)

---

**intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by**

**a person responsible for their safety.**

- 8. When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.**
- 9. This appliance is intended to be used in household and similar applications such as :**

# ***Important Safety***

---

## Instructions

- \* Staff kitchen areas in shops, offices and other working environments;**
- \* Farm houses;**
- \* By clients in hotels, motels and other residential environments;**
- \* Bed and breakfast type environments.**

Please keep for future reference. Read and follow all instructions before using your oven to

***Important***

## ***Safety***

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

---

This guide do not cover all possible conditions that may occur. Always contact your **Instructions** service agent or manufacturer about problems that you do not understand.

 **CAUTION**

[www.polotak.com](http://www.polotak.com)

Please keep for future reference. Read and follow all instructions before using your oven to

***Important***

---

## ***Safety***

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your **Instructions** service agent or manufacturer about problems that you do not understand.

### **1. You cannot operate**

www.polotak.com

# ***Important Safety***

Please keep for future reference. Read and follow all instructions before using

your oven to

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

## **Instructions**

This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

**your oven with the door open due to the safety interlocks built into the door mechanism. It is important not to tamper with the safety interlock.**

- It could result in harmful exposure to excessive microwave energy.  
(Safety interlocks automatically switch off

any cooking activity when the door is opened.)

**2. Do not place any object (such as kitchen towel, napkin, etc.) between the oven front face and the door or allow food or cleaner residue to accumulate on sealing surfaces.**

- It could result in harmful exposure to excessive microwave energy.

Please keep for future reference. Read and follow all instructions before using your oven to

***Important***

## ***Safety***

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your **Instructions** service agent or manufacturer about problems that you do not understand.

**3. Do not operate your oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door(bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.**

- ◆ It could result in harmful exposure to excessive microwave energy.

**⚠ CAUTION**

***Important Safety*** Please keep for future reference. Read and follow all instructions before using your oven to

---

prevent the risk of fire, electric shock, personal injury, or damage when using the oven. **Instructions**  
This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

**4. Please ensure**

[www.polotak.com](http://www.polotak.com)



Please keep for future reference. Read and follow all instructions before using your oven to

***Important***

---

## ***Safety***

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your **Instructions** service agent or manufacturer about problems that you do not understand.

**cooking times are correctly set small amounts of food require shorter cooking or heating time.**

- ◆ The over cooking may result in the food catching a fire and subsequent damage to your oven.

**5. When heating liquids, e.g. soups, sauces and beverages in your microwave oven,**

- \* **Avoid using straight sided containers with narrow necks.**
- \* **Do not overheat.**
- \* **Stir the liquid before placing the container in**

# ***Important Safety***

Please keep for future reference. Read and follow all instructions before using

your oven to

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

## **Instructions**

This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

**the oven and again halfway through the heating time.**

**\* After heating, allow to stand in the oven for a short time, stir or shake them again carefully and check the temperature of them before consumption to avoid burns (especially, contents of**

**feeding bottles and baby food jars).**

- ◆ Be careful when handling the container. Microwave heating of beverages can result in delayed eruptive boiling without evidence of bubbling. This could result in a sudden boil over of the hot liquid.

Please keep for future reference. Read and follow all instructions before using your oven to

***Important***

---

## ***Safety***

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your **Instructions** service

 **CAUTION**

understand.

[www.polotak.com](http://www.polotak.com)

***Important Safety*** Please keep for future reference. Read and follow all instructions before using your oven to

---

prevent the risk of fire, electric shock, personal injury, or damage when using the oven. **Instructions**  
This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

## **6. An exhaust outlet**

www.polotak.com

---

## ***Safety***

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your **Instructions** service agent or manufacturer about problems that you do not understand.

**is located on top or bottom or side of the oven. Don't block the outlet.**

- ◆ It could result in damage to your oven and poor cooking results.

**7. Do not operate the oven when empty. It is best to leave a glass of**

**water in the oven when not in use. The water will safely absorb all microwave energy, if the oven is accidentally started.**

- ◆ Improper use could result in damage to your oven.

**8. Do not cook food wrapped in paper towels, unless your**

# ***Important Safety***

Please keep for future reference. Read and follow all instructions before using

your oven to

## **Instructions**

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

**cook book contains instructions for the food you are cooking. And do not use newspaper in place of paper towels for cooking.**

- ◆ Improper use can be the cause of an explosion or a fire.

**9. Do not use wooden containers and ceramic containers which have metallic (e.g. gold or silver) inlays. Always remove metal twist ties. Check the utensils**

**are suitable for use in microwave ovens before use.**

- ◆ They may heat-up and char. Especialy metal objects in the oven may arc, which can cause serious damage.

Please keep for future reference. Read and follow all instructions before using your oven to

***Important***

---

## ***Safety***

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your **Instructions** service agent or manufacturer about problems that you do not understand.

www.polotak.com

# Important Safety

Please keep for future reference. Read and follow all instructions before using

your oven to

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

## Instructions

This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

### CAUTION

#### **10. Do not use recycled paper products.**

- ◆ They may contain impurities which may cause sparks and/or fires when used in cooking.

#### **11. Do not rinse the tray and rack by placing it in water just after cooking. This may cause breakage or damage.**

- ◆ Improper use could result in damage to your oven.

#### **12. Be certain to place the oven so the**

- ◆ Improper use could result in bodily injury and oven damage.

#### **13. Before cooking, pierce the skin of potatoes, apples or any such fruit or vegetable.**

- ◆ They could burst.



Please keep for future reference. Read and follow all instructions before using your oven to

## ***Safety***

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your **Instructions** service agent or manufacturer about problems that you do not understand.

**14. Do not cook eggs in their shell. Eggs in their shell and whole hardboiled eggs should not be heated in front of the door is 8 cm or more behind the edge of the surface on which it is placed, to avoid accidental tipping of the appliance.**

**microwave ovens since they may explode, even after microwave**

**heating has ended.**

◆ Pressure will build up inside the egg which will burst.

***Important Safety*** Please keep for future reference. Read and follow all instructions before using your

---

oven to

prevent the risk of fire, electric shock, personal injury, or damage when using the oven. **Instructions** This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

www.polotak.com

# Safety

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your **Instructions** service agent or manufacturer about problems that you do not understand.

**⚠ CAUTION**

**15. Do not attempt deep fat frying in your oven.**

⚠ This could result in a sudden boil over of the hot liquid.

**16. If smoke is observed (or**

**emitted), switch off or disconnect the oven from the power supply and keep the oven door**

⚠ **closed** It can be in the order cause **to stifle** of serious **any flames.** damage of

⚠ Your food may be poured due to the

# ***Important Safety***

Please keep for future reference. Read and follow all instructions before using your

oven to

prevent the risk of fire, electric shock, personal injury, or damage when using the oven. This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

possibility of container deterioration, which also can cause a fire.

**18. The temperature of accessible surfaces may be high when the appliance is operating.**

safety such as a fire, an electric shock.

**17. When food is heated or cooked in disposable**

## **Instructions**

**Do not touch the oven door, outer cabinet, rear cabinet, oven cavity, accessories and dishes during grill mode, convection mode and auto cook operations, before clearing**

**containers of plastic, paper or other combustible materials, keep an eye on the oven**

Please keep for future reference. Read and follow all instructions before using your oven to

***Important***

---

## ***Safety***

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your **Instructions** service agent or manufacturer about problems that you do not understand.

**and check it frequently.  
make sure they are not  
hot.**

- ◆ As they will become hot, unless wearing thick oven gloves there is the danger of a burn.

# ***Important Safety***

Please keep for future reference. Read and follow all instructions before using

your oven to

prevent the risk of fire, electric shock, personal injury, or damage when using the oven. **Instructions**

This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

[www.polotak.com](http://www.polotak.com)

## **Safety**

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your agent or manufacturer about problems that you do not understand.

### **⚠ CAUTION**

**19. The oven should be cleaned regularly and any food deposits removed.**

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the

life of the appliance and possibly result in a hazardous situation.

**20. Only use the temperature probe recommended for this oven (for appliances having a facility to use a**

# Important Safety

Please keep for future reference. Read and follow all instructions before using

your oven to

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

## Instructions

◆ You **temperature** can not ascertain-**sensing probe**). that the

**21. If heating elements are provided, during use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven. ◆**  
There is the danger of a burn.

**22. Follow exact directions given by each manufacturer for their popcorn product. Do not leave the oven unattended while the corn is being popped. If corn fails to pop after the suggested times, discontinue cooking. Never use a brown paper bag for**



Please keep for future reference. Read and follow all instructions before using your oven to

***Important***

## ***Safety***

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your **Instructions** service agent or manufacturer about problems that you do not understand.

**popping corn. Never attempt to pop**

temperature is accurate with unsuitable temperature probe.

**leftover kernels.**

- ◆ Overcooking could result in the corn catching a fire.

**⚠ CAUTION**

www.polotak.com

# ***Important Safety***

Please keep for future reference. Read and follow all instructions before using

your oven to

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

## **Instructions**

This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

### **23. This appliance must be**

www.polotak.com

Please keep for future reference. Read and follow all instructions before using your oven to

***Important***

## ***Safety***

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your **Instructions** service agent or manufacturer about problems that you do not understand.

**earthed.**

**The wires in this mains lead are colored in accordance with the following codes**

**BLUE ~ Neutral**

**BROWN ~ Live**

**GREEN & YELLOW ~ Earth**

**As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your**

# ***Important Safety***

Please keep for future reference. Read and follow all instructions before using

your oven to

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

## **Instructions**

**plug proceed as follows:**

**The wire which is colored BLUE must be connected to the terminal which is marked with the letter N or Colored**

**BLACK.**

**The wire which is colored BROWN must be**

**connected to the terminal which is marked with the letter L or colored RED.**

**The wire which is colored GREEN & YELLOW or GREEN must be connected to the terminal which is marked with the letter E or-**

**If the supply cord is damaged, it must be replaced by the**

Please keep for future reference. Read and follow all instructions before using your oven to

***Important***

## ***Safety***

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your **Instructions** service agent or manufacturer about problems that you do not understand.

**⚠ CAUTION**

**manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.**

- ◆ Improper use may cause serious electric damage.

# ***Important Safety***

Please keep for future reference. Read and follow all instructions before using

your oven to

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

## **Instructions**

This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

### **24. Do not use harsh**

[www.polotak.com](http://www.polotak.com)

## ***Safety***

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your **Instructions** service agent or manufacturer about problems that you do not understand.

**abrasive cleaners or sharp metal scrapers to clean the oven door glass.**

- ◆ They can scratch the surface, which may result in shattering of the glass.

**25. This oven should not be used for commercial catering purposes.**

- ◆ Improper use could result in damage to your oven.

**26. This microwave oven is intended to be used freestanding or built-in. This microwave oven**

# ***Important Safety***

Please keep for future reference. Read and follow all instructions before using

your oven to

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

**must not be placed in a cabinet.**

- 27. The connection may be achieved by having the plug accessible or by incorporation a switch in the fixed wiring in accordance with the wiring rules.**

## **Instructions**

- ◆ Using improper plug or switch can cause an electric shock or a fire.

- 28. (Young)Children should be supervised to ensure that they do not play with the appliance.**



Please keep for future reference. Read and follow all instructions before using your oven to

***Important***

---

## ***Safety***

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your **Instructions** service

 **CAUTION**

understand.

[www.polotak.com](http://www.polotak.com)

# ***Important Safety***

Please keep for future reference. Read and follow all instructions before using

your oven to

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

## **Instructions**

This guide do not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

### **29. The appliance is not**

www.polotak.com

---

## ***Safety***

prevent the risk of fire, electric shock, personal injury, or damage when using the oven.

This guide do not cover all possible conditions that may occur. Always contact your **Instructions** service agent or manufacturer about problems that you do not understand.

**intended to be operated by means of an external timer or separate remote-control system.**

**30. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked**

**before consumption, in order to avoid burns.**

**31. Steam cleaner is not to be used.**

# Precautions

## Precautions to avoid possible exposure to excessive microwave energy.

You cannot operate your oven with the door open due to the safety interlocks built into the door mechanism. These safety interlocks automatically switch off any cooking activity when the door is opened; which in the operation of microwave function could result in harmful exposure to microwave energy.

**It is important not to tamper with the safety interlocks.**

Do not place any object between the oven front face and the door or allow food or cleaner residue to accumulate on sealing surfaces.

Do not operate your oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door(bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.

Your oven should not be adjusted or repaired by anyone except qualified service personnel.

### **WARNING**

When heating liquids, e.g. soups, sauces and beverages in your oven with microwave function, delayed eruptive boiling can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid. To prevent this possibility the following steps should be taken:

- 1 Avoid using straight sided containers with narrow necks.
- 2 Do not overheat.

# Unpacking & Installing

By following the basic steps on these two pages you will be able to quickly check that your oven is operating correctly. Please pay particular attention to the guidance on where to install your oven. When unpacking your oven make sure you remove all accessories and packing. Check to make sure that your oven has not been

- 3 Stir the liquid before placing the container in the oven and again halfway through the heating time.
- 4 After heating, allow to stand in the oven for a short time, stir or shake them (especially the contents of feeding bottles and baby food jars) again carefully and check the temperature of them before consumption to avoid burns (especially, contents of feeding bottles and baby food jars).

Be careful when handling the container.

## WARNING




**Always allow food to stand after being cooked by microwaves and check the temperature of them before consumption. Especially contents of feeding bottles and baby food jars.**




**Please ensure cooking times are correctly set as over cooking may result in the FOOD catching fire and subsequent damage to your oven.**

damaged during delivery.

- 1** Unpack your oven and place it on a flat level surface.

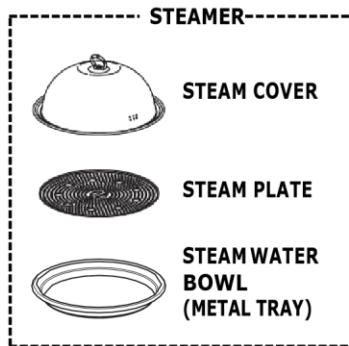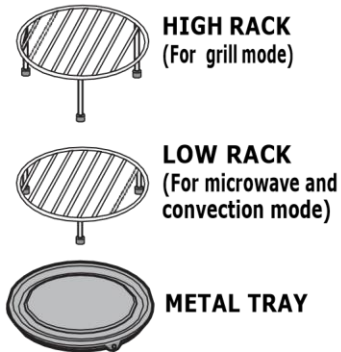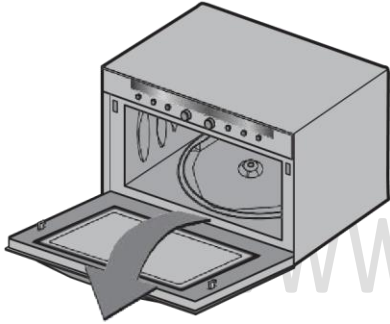

- 2** Place the oven in the level location of your choice with more than 85 cm height but make sure there is at least 20 cm of space on the top and 10 cm at the rear for proper ventilation. The front of the oven should be at least min. 8 cm/max. 22 cm from the edge of the surface to prevent tipping. An exhaust outlet is located on bottom or side of the oven. Blocking the outlet can damage the oven.

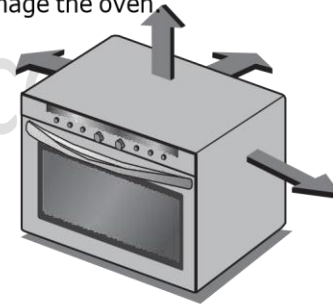

**MODEL : MA3884VC**

- \* THIS OVEN SHOULD NOT BE USED FOR COMMERCIAL CATERING PURPOSES.
- \* THIS OVEN CAN BE USED AS BUILT-IN TYPE.
- \* MUST USE THE BUILT-IN KIT THAT IS MADE BY LG ELECTRONICS.

**MODEL : MA3884NCR**

- \* THIS OVEN SHOULD NOT BE USED FOR COMMERCIAL CATERING PURPOSES.
- \* THIS OVEN CAN NOT BE USED AS BUILT-IN TYPE.

[www.polotak.com](http://www.polotak.com)

Plug your oven into a standard household socket. Make sure your oven is the only appliance connected to the socket. **If your oven does not operate properly, unplug it from the electrical socket and then plug it back in.**

[www.polotak.com](http://www.polotak.com)



Press the **STOP/CLEAR** button, and press the

6

7

www.polotak.com

behot.

8

**3**

**START/Q-START** button one time to set 30 seconds of cooking time.


**4**

Open your oven door by pulling the **DOOR HANDLE**.

Place the **METAL TRAY** inside the oven.

**5**

Fill a **microwave safe container** with 300 ml (1/2 pint) of water. Place on the **METAL TRAY** and close the oven

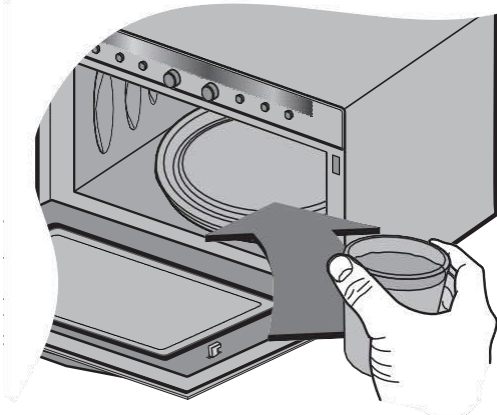

door. If you have any doubts about what type of

container to use please refer to page 42.

The **DISPLAY** will count down from 30 seconds. When it reaches 0 it will BEEPS. Open door and

test the temperature of If your oven is the water warm.

**Be when the container**



sound the oven


the water. operating should be **careful removing it may**

## **YOUR OVEN IS NOW INSTALLED**

The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

[www.polotak.com](http://www.polotak.com)

# Control Panel

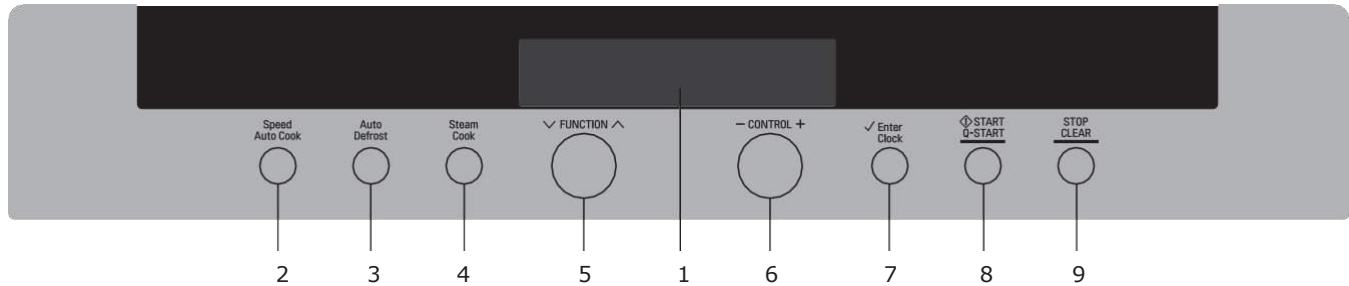

**1.DISPLAY WINDOW:** You can show time of day, cooking time, power level and cooking categories.

**2.Speed Auto Cook:** Speed auto cook allows you to cook most of your favorite food quickly by selecting the food type and the weight of the food.

**3.Auto Defrost:** You can select the food type and the weight of the food

**4.Steam Cook :** Steam cook allows you to cook most of your favorite food quickly by selecting the food type and the weight of the food.

**5.FUNCTION DIAL:** You can select the operating function.

**6.CONTROL DIAL:**

- You can set cooking time, temperature, weight and cooking categories.

- You can lengthen or shorten the cooking time at any point by turning the dial knob(except defrost mode and deodorize mode).

**7. Enter/Clock:** You can determine the selected cooking category, microwave power level or temperature, and you can set the time of day.

#### **8. START/Q-START:**

- In order to start cooking which is selected, press button one time.
- The quick start feature allows you to set 30 seconds intervals of HIGH power cooking with a touch of the quick start button.

**9. STOP/CLEAR:** You can stop over and clear all entries except time of day.

## **Setting the**

## **Clock**

*In the following example I will show you how to set the time for 14:35 .*

*Make sure that you have removed all packaging from your oven.*



**NOTE: Information Blink**


**From setting blink will guide to next step.**

When your oven is plugged in for the first time or when power resumes after a power interruption, all of the display segments will be lit up for 15 seconds then '12:00' will be shown in the display you will then need to reset the clock.


If the clock (or display) shows any strange looking symbols, unplug your oven from the electrical socket and plug it back in and reset the clock.

Make sure that you have correctly installed your oven as described earlier in this book.

Press **STOP/CLEAR**

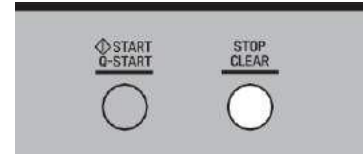


Press **Enter/Clock**.

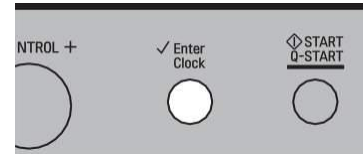


Turn **CONTROL** dial knob until display shows "14:00".

Press **Enter/Clock** for hour confirmation

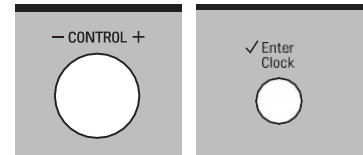

Turn **CONTROL** dial knob until display shows "14:35".

Press **Enter/Clock**.  
The clock starts counting.

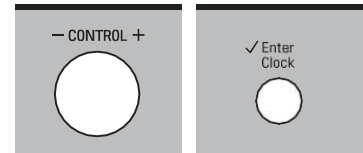

---

[www.polotak.com](http://www.polotak.com)

***Child***


[www.polotak.com](http://www.polotak.com)






Your oven has a safety feature that prevents accidental running of the oven. Once the child lock is set, you will be unable to use any functions and no cooking can take place. However your child can still open the oven door.


Press **STOP/CLEAR**.

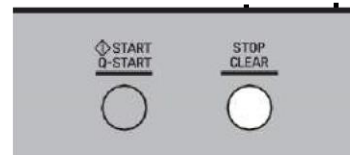


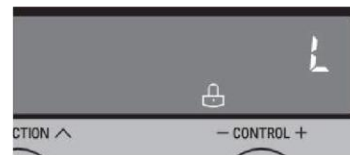
Press and hold **STOP/CLEAR** until "L" and  appears on the display and BEEP sounds.


The **CHILD LOCK** is now set.

The time will disappear on the display but will reappear on the display a few seconds later.

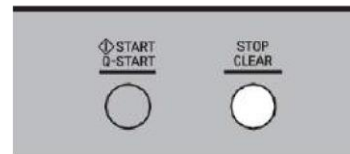


If any button is pressed, "L" and  will appear on the display



To cancel **CHILD LOCK** press and hold **STOP/CLEAR** until "L" and  disappears.

You will hear BEEP when it's released.

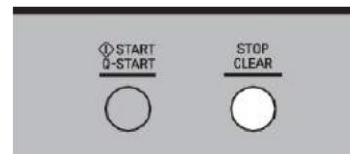


[www.polotak.com](http://www.polotak.com)




The **QuickStart** feature allows you to set 30 seconds intervals of HIGH power (900W) cooking with pressing of the **START/QSTART** button.

Press **STOP/CLEAR**.

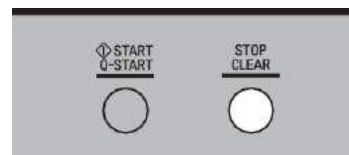

Press **START/QSTART** four times to select 2 minutes on HIGH power (900W). Your oven will start before you have finished the fourth press.

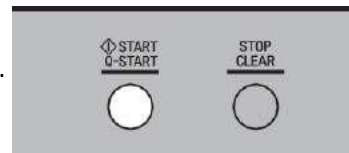

## Quick

w). Start

*In the following example I will show you how to set 2 minutes of cooking on high power(900*

[www.polotak.com](http://www.polotak.com)

*In the following example I will show you how to*

---

## ***Micro Power***

*cook some food on 600 W power for 5 minutes and 30 seconds.* **Cooking**

[www.polotak.com](http://www.polotak.com)




Your oven has five microwave Power settings. High power is automatically selected and turning of dial will select a different power level.

<b>POWER</b>	
<b>HIGH</b>	900 W
<b>MEDIUM HIGH</b>	600 W
<b>MEDIUM</b>	360 W
<b>DEFROST/ MEDIUM LOW</b>	180 W
<b>LOW</b>	90 W


Make sure that you have correctly installed your oven as described earlier in this book.

Press **STOP/CLEAR**.

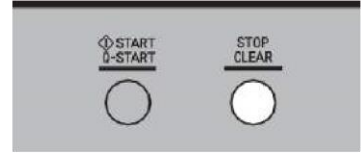


Turn **FUNCTION** dial to select micro (≈).

Press **Enter/Clock** for micro confirmation.

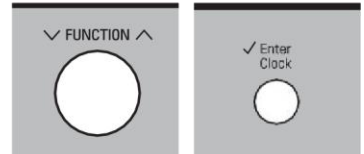

Turn **CONTROL** dial knob until display shows "600 W".



Press **Enter/Clock** for power confirmation.

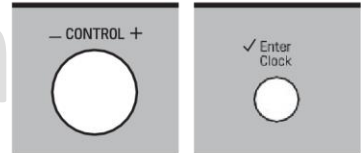

Turn **CONTROL** dial knob until display shows "5:30".

Press **START/Q-START**.

When cooking you can increase or decrease cooking time by turning **CONTROL** dial.

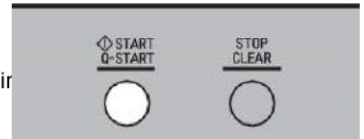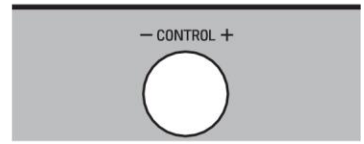

*In the following example I will show you how to*

---

## **Micro Power**


*This oven is equipped with 5 power levels to give you maximum flexibility and control over cooking.*

### **Level**

*The table below shows the examples of food and their recommended cooking power levels for use with this oven.*

www.polotak.com



<b>POWER LEVEL</b>	<b>OUTPUT</b>	<b>USE</b>	<b>ACCESSORY</b>
<b>HIGH</b>	900 W	<ul style="list-style-type: none"><li>*Boil Water</li><li>*Cook poultry pieces, fish, vegetables</li><li>*Cook tender cuts of meat</li></ul>	Low Rack + Metal Tray 
<b>MEDIUM HIGH</b>	600 W	<ul style="list-style-type: none"><li>*All reheating</li><li>*Roast meat and poultry</li><li>*Cook mushrooms and shellfish</li><li>*Cook foods containing cheese and eggs</li></ul>	
<b>MEDIUM</b>	360 W	<ul style="list-style-type: none"><li>*Bake cakes and scones</li><li>*Prepare eggs</li><li>*Cook custard</li><li>*Prepare rice, soup</li></ul>	
<b>DEFROST/ MEDIUM LOW</b>	180 W	<ul style="list-style-type: none"><li>*All thawing</li><li>*Melt butter and chocolate</li><li>*Cook less tender cuts of meat</li></ul>	
<b>LOW</b>	90 W	<ul style="list-style-type: none"><li>*Soften butter &amp; cheese</li><li>*Soften ice cream</li><li>*Raise yeast dough</li></ul>	

www.polotak.com



# Grill Cooking

use the Grill-1 to cook some food for 12 minutes and 30 seconds. In the following example I will show you how to



This feature will allow you to brown and crisp food quickly.


The grill rack is placed on the metal tray at the grill mode.

The  
rack  
grill




high  
must be  
used  
during  
cooking.

Press **STOP/CLEAR**.

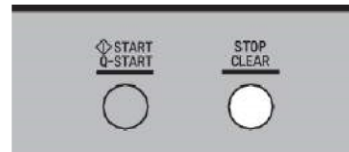


Turn **FUNCTION** dial to select grill (  ).

Press **Enter/Clock** for grill confirmation.

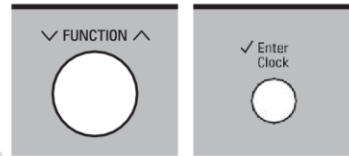

Turn **CONTROL** dial knob until display shows "Gr-1".

Press **Enter/Clock** for category confirmation.

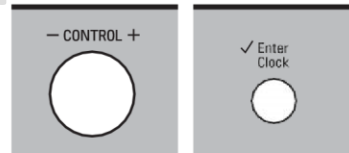


Category	Display	Heater Operating
Grill-1	Gr-1	Upper Heater(1550 W)
Grill-2	Gr-2	Upper Heater(1100 W)
Grill-3	Gr-3	Lower Heater(700 W)

Turn **CONTROL** dial knob until display shows "12:30".

Press **START/Q-START**.

When cooking you can increase or decrease cooking time by turning **CONTROL** dial.

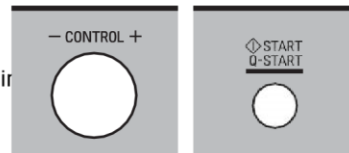

**After cooking you must wear gloves and container to take metal tray out oven, because metal tray is very hot.**

# Convection Cooking


*In the following example I will show you how to use the convection to cook some food for 50 minutes for 220 °C temp.*

## 1. To Preheat

Press **STOP/CLEAR**.

## 2. To Cook

Press **STOP/CLEAR**.

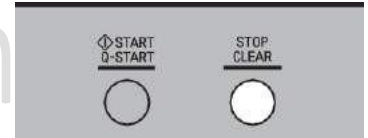


Turn **FUNCTION** dial to select convection mode ( ).  
Press **Enter/Clock** for convection confirmation.

Turn **CONTROL** dial knob until display shows "220 °C".

Turn **FUNCTION** dial to select convection mode ( ).  
Press **Enter/Clock** for convection confirmation.

Turn **CONTROL** dial knob until display shows "220 °C".

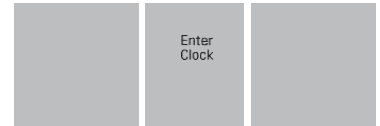

In the following example I will show you how to

The convection oven has a temperature range.(40 °C, 100~230 °C)

The oven has a ferment function at the oven temperature of 40 °C. You should wait until

 
the oven is cool because you cannot use a ferment function if the oven temperature is over 40 °C.

Press **Enter/Clock** temp. confirmation.



It is available to extend the cooking time up to 9 hours in the condition of 40 °C at convection function for the operating microwave oven.


Turn **CONTROL** dial knob until display shows "50:00".



Your oven will take a few minutes to reach the selected temperature.

Press **START/Q-START**. Display shows "Pr-H".

Press **START/Q-START**. **After cooking you must wear gloves to take metal tray/ container out of oven since it is hot.**

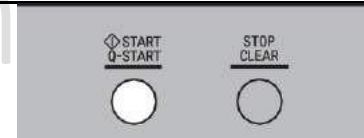

Once it has reached the correct temperature, your oven will BEEP to let you know that it has reached the

correct temperature.

Then place your food in your oven: then set your oven to start cooking.

**The low rack is recommended for convection cooking.**



*In the following example I will show you how to*

www.polotak.com

*In the following example I will show you how to*

## ***Speed combi***

www.polotak.com

***After cooking you must wear gloves to take metal tray /  
container out of oven since its hot.***


---

programme your oven with micropower360W and grill for a




**Speed Combi**  
(Co-1, 2, 3)

Press **STOP/CLEAR**.

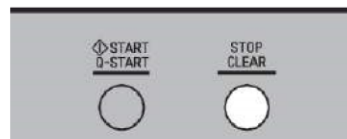

Your oven has a combination cooking feature which allows you to cook food with **heater** and **microwave** at the same time or alternately. This generally means it takes less time to cook your food.


Turn **FUNCTION** dial speed combi ( ) to select grill combination mode (Co-1, 2, 3).

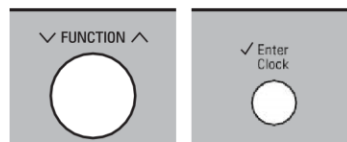

Press **Enter/Clock** for speed combi confirmation.

You can set three kinds of micro power level (180 W, 360 W and 600 W) in speed combi mode.

Turn **CONTROL** dial knob until display shows "Co-1".

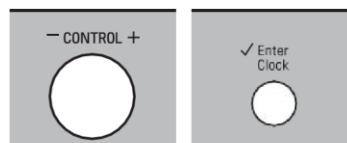

Press **Enter/Clock** for grill-1 confirmation.

**\* Speed combi Category**

**Co-1** Grill-1 + Microwave power

**Co-2** Grill-2 + Microwave power


**Co-3** Grill-3 + Microwave power

**Co-4** Convection + Microwave power

**Co-5** (Upper + Lower heater) + Microwave power

\* Grill mode: Refer to page 25


Turn **CONTROL** dial knob until display shows "360 W".

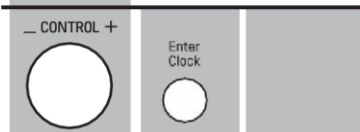

Press **Enter/Clock** for power confirmation.

Turn **CONTROL** dial knob until display shows "25:00".

Press **START/Q-START**.

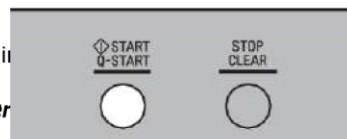

When cooking you can increase or decrease cooking time by turning **CONTROL** dial.

**After cooking you must wear gloves to take out the metal tray or container out of oven since its hot.**

*In the following example I will show you how to*

*cooking time of 25 minutes.*

# Cooking

www.polotak.com

***After cooking you must wear gloves to take metal tray /  
container out of oven since its hot.***

---

# ***Speed combi***

*In the following example I will show you how to programme your oven with:- micro power 360 W and at a*

## **Cooking**

*convection temperature 200 °C for a cooking time of 25 minutes.*

[www.polotak.com](http://www.polotak.com)

***After cooking you must wear gloves to take metal tray / container out of oven since its hot.***

---



In the following example I will show you how to



### Speed Combi (Co-4)


Your oven has a combination cooking feature which allows you to cook food with **convection temp.** and **microwave** at the same time or alternately. This generally means it takes less time to cook your food.

You can set three kinds of micro power level (0 W, 180 W, 360 W, 600 W) in speed combi mode (Co-4).



#### \* Speed Combi Category

- Co-1** **1** Grill-1 + Microwave power
- Co-2** **2** Grill-2 + Microwave power
- Co-3** **3** Grill-3 + Microwave power
- Co-4** **4** Convection + Microwave power
- Co-5** **5** (Upper + Lower heater) + Microwave power

Press **STOP/CLEAR**.

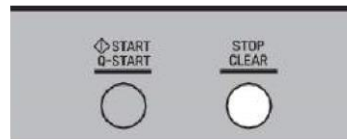


 Turn **FUNCTION** dial speed combi ( ) to select convection combination mode (Co-4).

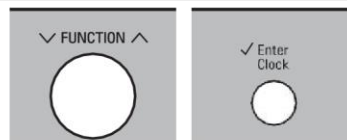

Press **Enter/Clock** for speed combi confirmation.


Turn **CONTROL** dial knob until display shows "Co-4".

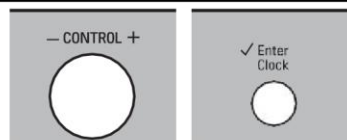

Press **Enter/Clock** for convection confirmation.


Turn **CONTROL** dial knob until display shows "200 °C".

 Press **Enter/Clock** for temp. confirmation.



Turn **CONTROL** dial knob until display shows "360 W".

Press **Enter/Clock** for power confirmation.

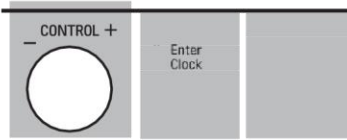


Turn **CONTROL** dial knob until display shows "25:00".

Press **START/Q-START**.

When cooking you can increase or decrease cooking time by turning **CONTROL** dial.

**After cooking you must wear gloves to take metal tray / container out of oven since its hot.**

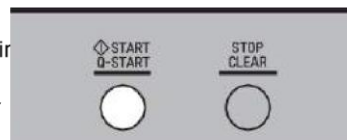

www.polotak.com

***After cooking you must wear gloves to take metal tray /  
container out of oven since its hot.***

---

In the following example I will show you how to




### Speed Combi (Co-5)

 
You can set four kinds of micro power level(180 W, 360 W, 600 W) in speed combi mode(Co-5).

#### \* Speed Combi Category


- |      |          |  |
|------|----------|--|
| Co-1 | <b>1</b> | Grill-1 + Microwave power                |
| Co-2 | <b>2</b> | Grill-2 + Microwave power                |
| Co-3 | <b>3</b> | Grill-3 + Microwave power                |
| Co-4 | <b>4</b> | Convection + Microwave power             |
| Co-5 | <b>5</b> | (Upper + Lower heater) + Microwave power |

Press **STOP/CLEAR**.

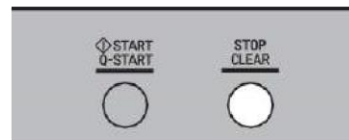

Turn **FUNCTION** dial speed combi (  ) to select speed combination mode(Co-5).

Press **Enter/Clock** for speed combi confirmation.

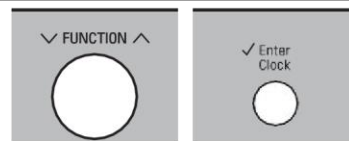


Turn **CONTROL** dial knob until display shows "Co-5".

Press **Enter/Clock** for speed combi confirmation.

Turn **CONTROL** dial knob until display shows "200 °C".

Press **Enter/Clock** for temp. confirmation.

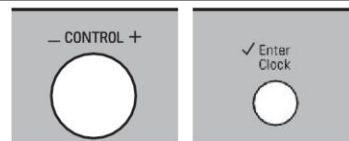


[ x2 ]

Turn **CONTROL** dial knob until display shows "360 W".

Press **Enter/Clock** for power confirmation.


Turn **CONTROL** dial knob until display shows "25:00".

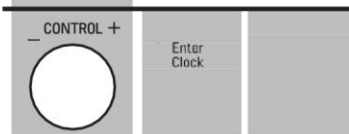

Press **START**.

Increase or decrease cooking time by turning **CONTROL** dial knob.

**After cooking you must wear gloves to take metal tray / container out of oven since its hot.**

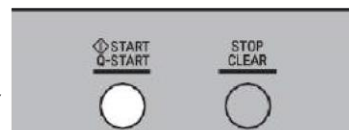

**Speed combi**

*programme your oven with micropower360W and at a temperature 200 °C for a cooking time of 25 minutes.*

## Cooking

www.polotak.com

***After cooking you must wear gloves to take metal tray / container out of oven since its hot.***

---

*In the following example I will show you how to*

www.polotak.com

***After cooking you must wear gloves to take metal tray /  
container out of oven since its hot.***

---

# ***Speed Auto***

www.polotak.com

***After cooking you must wear gloves to take metal tray /  
container out of oven since its hot.***


---

In the following example I will show you how to




Speed auto cook menus are programmed. Speed auto cook allows you to cook most of your favorite food quickly by selecting the food type and the weight of the food.

Press **STOP/CLEAR**.

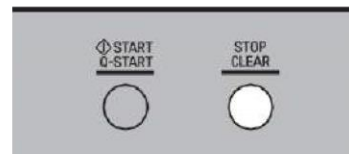


Press **Speed Auto Cook** (m).

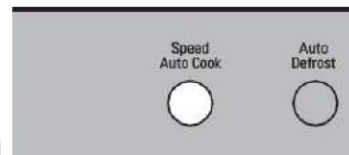

Turn **CONTROL** dial knob until display shows "Ac1".



Press **Enter/Clock** for category confirmation.

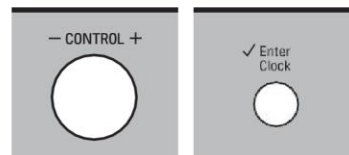


Turn **CONTROL** dial knob until display shows "0.4 kg".



Press **START**.

When cooking you can increase or decrease cooking time by turning **CONTROL** dial.

**After cooking you must wear gloves to take metal tray / container out of oven since its hot.**

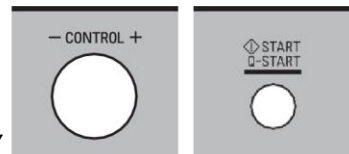

*In the following example I will show you how to cook 0.4 kg of frozen pizza(Ac 1)*

www.polotak.com

***After cooking you must wear gloves to take metal tray /  
container out of oven since its hot.***

---



## ***SPEED AUTO COOK GUIDE***

<b><i>Function</i></b>	<b><i>Category</i></b>		<b><i>Weight Limit</i></b>	<b><i>Utensil</i></b>	<b><i>Food Temp.</i></b>	<b><i>Instructions</i></b>
<b>Speed Auto Cook</b>	Ac 1	Frozen Pizza	0.30 – 0.50 kg	Metal tray	Frozen	This function is for cooking frozen pizza. Remove all package and place on the metal tray. After cooking, stand for 1~2 minutes.
	Ac 2	French Fries	0.20 – 0.75 kg	Heatproof glass dish + High rack + Metal tray	Frozen	Spread frozen potato products out on a heatproof glass dish on the high rack. For the best results, cook in a single layer. When BEEP, turn food over. And then press start to continue cooking. After cooking, remove from the oven and stand for 1~2 minutes.
	Ac 3	Whole Chicken	0.80 – 1.80 kg	Low rack + Metal tray	Refrigerated	Brush whole chicken with melted margarine, butter or seasonings, if desired. Place the whole chicken breast-side down on the low rack. When BEEP, drain the juices and turn food over immediately. And then press start to continue cooking. After cooking, let stand covered with foil for 10 minutes.
	Ac 4	Chicken Pieces	0.20 – 0.80 kg	High rack + Metal tray	Refrigerated	Place the chicken pieces on the high rack. When BEEP, turn food over. And then press start to continue cooking. After cooking, stand covered with foil for 2-5 minutes.

## ***SPEED AUTO COOK GUIDE***

Ac 5	Beef Steaks	0.30 - 1.20 kg	High rack + Metal tray	Refrigerated	Place on the high rack. When BEEP, turn food over. And then press start to continue cooking. After cooking, serve immediately.
Ac 6	Roast Lamb	0.80 - 1.80 kg	Low rack + Metal tray	Refrigerated	Trim excess fat from lamb. Brush the lamb with melted margarine or butter. Place on the low rack. When BEEP, turn food over. And then press start to continue cooking. After cooking, stand covered with foil for 10 minutes.


<b><i>Function</i></b>	<b><i>Category</i></b>		<b><i>Weight Limit</i></b>	<b><i>Utensil</i></b>	<b><i>Food Temp.</i></b>	<b><i>Instructions</i></b>
<b>Speed Auto Cook</b>	Ac 7	Roast Beef	0.80 - 1.80 kg	Low rack + Metal tray	Refrigerated	Brush the beef with melted margarine or butter. Place on the low rack. When BEEP, turn food over. And then press start to continue cooking. After cooking, stand covered with foil for 10 minutes.
	Ac 8	Jacket Potatoes	0.20 - 1.00 kg	High rack + Metal tray	Room	Choose medium sized potatoes. (200-220 g per each) Wash and dry potatoes. Pierce the potatoes several times with a fork. Place the potatoes on the High rack. Adjust weight and press start. When BEEP, turn food over. After cooking, remove the potatoes from the oven. Let stand covered with foil for 5 minutes.

## **SPEED AUTO COOK GUIDE**

Ac 9	Frozen Dinners	0.40 – 1.00 kg	Low rack + Metal tray	Frozen	Place frozen dinner uncovered on low rack.
Ac 10	Fresh Vegetables	0.20 – 1.00 kg	Low rack + Metal tray + Microwave-safe bowl with cover	Room	<p>Cut vegetables into small pieces.</p> <p>**Broccoli : Cut into floweret-size</p> <p>**Carrot : Peel and slice 5 mm thick</p> <p>Place vegetables in a microwave-safe bowl. Add water. Cover with wrap. When BEEP, stir once. After cooking, stir and allow to stand for 2-3 minutes. Add amount of water according to the quantity.</p> <p>** 0.20 kg - 0.50 kg : 2 Tablespoons</p> <p>** 0.55 kg - 1.00 kg : 4 Tablespoons</p>
Ac 11	Frozen Vegetables	0.20 – 1.00 kg	Low rack + Metal tray + Microwave-safe bowl with cover	Frozen	<p>Place vegetables in a microwave-safe bowl. Add water. Cover with wrap. When BEEP, stir once. After cooking, stir and allow to stand for 2-3 minutes. Add amount of water according to the quantity.</p> <p>** 0.20 kg - 0.50 kg : 2 Tablespoons</p> <p>** 0.55 kg - 1.00 kg : 4 Tablespoons</p>
<b>Function</b>	<b>Category</b>	<b>Weight Limit</b>	<b>Utensil</b>	<b>Food Temp.</b>	<b>Instructions</b>

## SPEED AUTO COOK GUIDE

<b>Speed Auto Cook</b>	Ac 12	Rice / Pasta	0.10 – 0.30 kg	Low rack +Metal tray + Microwave- safe bowl with cover	Room	Place rice/pasta and boiling water with 1/4 to 1 teaspoon salt in a deep and large bowl (3 L). When BEEP, stir once.															
						<table border="1"> <tr> <td>Weight</td> <td>100 g</td> <td>200 g</td> <td>300 g</td> <td>Cover</td> </tr> <tr> <td rowspan="2">Water</td> <td>Rice</td> <td>300 ml</td> <td>600 ml</td> <td>900 ml</td> <td>Cover and vent with wrap</td> </tr> <tr> <td>Pasta</td> <td>400 ml</td> <td>800 ml</td> <td>1200 ml</td> <td>Uncover</td> </tr> </table> <p>** Rice - After cooking, stand covered for 5 minutes or until water is absorbed.</p> <p>** Pasta - During the cooking, stir several times if required. After cooking, stand 1-2 minutes. Rinse pasta with cold water.</p>	Weight	100 g	200 g	300 g	Cover	Water	Rice	300 ml	600 ml	900 ml	Cover and vent with wrap	Pasta	400 ml	800 ml	1200 ml
Weight	100 g	200 g	300 g	Cover																	
Water	Rice	300 ml	600 ml	900 ml	Cover and vent with wrap																
	Pasta	400 ml	800 ml	1200 ml	Uncover																

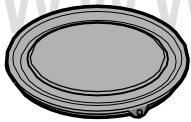

< Metal Tray >



< Low Rack + Metal Tray >



< High Rack + Metal Tray >

# **Steam**

*fish(St 6).* **Cook**

*In the following example I will show you how to cook 0.6 kg of whole*

www.polotak.com

## STEAM COOK GUIDE




This feature allows you steamed cook.


### CAUTION:

1. Always use oven gloves when removing a STEAMER from the oven. It's very hot.
2. Do not put a hot STEAMER on a glass table or a place easy to be melted after cooking. Always make sure to use a pad or tray.
3. When you use this Steamer, pour at least 300 ml water before use. If the amount of water is less than 300 ml, it may cause incomplete cooking, or may cause a fire or fatal damage to the product.
4. Be careful when you move the STEAMER with water.
5. When you use the STEAMER, the steam cover and steam water bowl should be set perfectly right. The eggs or the chestnut would be exploding without setting the steam cover and steam water bowl.
6. Never use this Steamer with a product of different model. It may cause a fire or fatal damage to the product.

Press **STOP/CLEAR**.

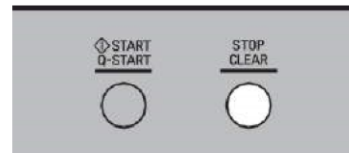


Press **Steam Cook** (🍲).

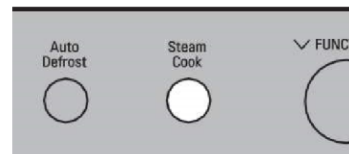

Turn **CONTROL** dial knob until display shows "St 6".



Press **Enter/Clock** for category confirmation.

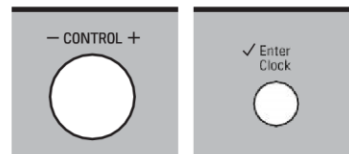


Turn **CONTROL** dial knob until display shows "0.60 kg".



Press **START/Q-START**.

When cooking you can increase or decrease cooking time by turning **CONTROL** dial.

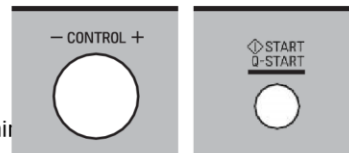

## STEAM COOK GUIDE

<b>Function</b>	<b>Food</b>	<b>Weight Range</b>	<b>Utensil</b>	<b>Initial Temperature</b>	<b>Instructions</b>
<b>Steam Cook</b>	St 1 Vegetables (Small cut)	0.20 - 0.80 kg	Steam cover Steam plate Steam water bowl Low rack Metal tray	Room	<ol style="list-style-type: none"> <li>1. Clean vegetables and cut into similar sized pieces.</li> <li>2. Pour 300 ml tap water into the steam water bowl. Place the steam plate on the steam water bowl. Place the prepared food on the steam plate in a single layer. Cover with the steam cover.</li> <li>3. Place the steam water bowl in the center of the low rack on metal tray.</li> <li>4. After steaming, stand for 1 minute in the oven. - Baby Carrot, Broccoli, Cauliflower, Zucchini, Spinach</li> </ol>
	St 2 Vegetables (Large cut)	0.20 - 0.80 kg	Steam cover Steam plate Steam water bowl Low rack Metal tray	Room	<ol style="list-style-type: none"> <li>1. Clean vegetables and cut into quarters.</li> <li>2. Pour 300 ml tap water into the steam water bowl. Place the steam plate on the steam water bowl. Place the prepared food on the steam plate in a single layer. Cover with the steam cover.</li> <li>3. Place the steam water bowl in the center of the low rack on metal tray.</li> <li>4. After steaming, stand for 1 minute in the oven. - Cabbage, Potato</li> </ol>
	St 3 Tomato	0.20 - 0.80 kg	Steam cover Steam plate Steam water bowl Low rack Metal tray	Room	<ol style="list-style-type: none"> <li>1. Choose small sized tomatoes. If the tomato is too big cut into half.</li> <li>2. Pour 300 ml tap water into the steam water bowl. Place the steam plate on the steam water bowl. Place the prepared food on the steam plate in a single layer. Cover with the steam cover.</li> </ol>

## STEAM COOK GUIDE

					<ol style="list-style-type: none"> <li>Place the steam water bowl in the center of the low rack on metal tray.</li> <li>After steaming, stand for 1 minute in the oven.</li> </ol>
St 4	Chicken Legs	0.20 - 0.80 kg	Steam cover Steam plate Steam water bowl Low rack Metal tray	Refrigerated	<ol style="list-style-type: none"> <li>Clean the food and season as desired.</li> <li>Pour 300 ml tap water into the steam water bowl. Place the steam plate on the steam tray. Place the prepared food on the steam plate in a single layer. Cover with the steam cover.</li> <li>Place the steam water bowl in the center of the low rack on metal tray.</li> <li>After steaming, stand for 1-2 minutes in the oven.</li> </ol>

**Note:** The cooking time may be adjusted by using the dial while the meal is cooking.

<i>Function</i>	<i>Food</i>	<i>Weight Range</i>	<i>Utensil</i>	<i>Initial Temperature</i>	<i>Instructions</i>
-----------------	-------------	---------------------	----------------	----------------------------	---------------------



## STEAM COOK GUIDE

<b>Steam Cook</b>	St 5	Shellfish	0.10 - 1.00 kg	Steam cover Steam plate Steam water bowl Low rack Metal tray	Refrigerated	<ol style="list-style-type: none"> <li>1. Clean the food and season as desired.</li> <li>2. Pour 300 ml tap water into the steam water bowl. Place the steam plate on the steam water bowl. Place the prepared food on the steam plate in a single layer. Cover with the steam cover.</li> <li>3. Place the steam water bowl in the center of the low rack on metal tray.</li> <li>4. After steaming, stand for 1 minute in the oven. - Shrimp, Crab, Clam, Scallops, Cuttlefish. (under 25 cm length)</li> </ol>
	St 6	Whole Fish	0.10 - 0.60 kg	Steam cover Steam plate Steam water bowl Low rack Metal tray	Refrigerated	<p>Same as above.</p> <p>(under 25 cm length and 3 cm thick)</p>
	St 7	Fish Fillet	0.10 - 0.60 kg	Steam cover Steam plate Steam water bowl Low rack Metal tray	Refrigerated	<p>Same as above.</p> <p>(under 2.5 cm thick)</p>
	St 8	Chicken Breast	0.20 - 0.60 kg	Steam cover Steam plate Steam water bowl Low rack Metal tray	Refrigerated	<ol style="list-style-type: none"> <li>1. Clean the food and season as desired.</li> <li>2. Pour 300 ml tap water into the steam water bowl. Place the steam plate on the steam tray. Place the prepared food on the steam plate in a single layer. Cover with the steam cover.</li> <li>3. Place the steam water bowl in the center of the low rack on metal tray.</li> </ol>

## STEAM COOK GUIDE

					4. After steaming, stand for 1-2 minutes in the oven.
--	--	--	--	--	---

**Note:** The cooking time may be adjusted by using the dial while the meal is cooking.


<i>Function</i>	<i>Food</i>		<i>Weight Range</i>	<i>Utensil</i>	<i>Initial Temperature</i>	<i>Instructions</i>
<b>Steam Cook</b>	St 9	Eggs	2-9 eggs	Steam cover Steam plate Steam water bowl Low rack Metal tray	Refrigerated	1. Pour 300 ml tap water into the steam water bowl. Place the steam plate on the steam water bowl. Place the eggs on the steam plate. Cover with the steam cover. 2. Place the steam water bowl in the center of the low rack on metal tray. 3. After steaming, stand for 1minute in the oven.
	St 10	Ground Meat	0.10 - 0.30 kg	Steam cover Steam plate Steam water bowl Low rack Metal tray	Refrigerated	1. Pour 300 ml tap water into the steam water bowl. Place the steam plate on the steam water bowl. Place dampd cotton cloth or paper towel on the steam plate. 2. Place the prepared food on the steam plate in a single layer. Cover with the steam cover. 3. Place the steam water bowl in the center of the low rack on metal tray. 4. After steaming, stand for 1minute in the oven.

## STEAM COOK GUIDE

St 11	Sausage	0.10 - 0.60 kg	Steam cover Steam plate Steam water bowl Low rack Metal tray	Refrigerated	<ol style="list-style-type: none"> <li>1. Pour 300 ml tap water into the steam water bowl. Place the steam plate on the steam water bowl. Place the prepared food on the steam plate in a single layer. Cover with the steam cover.</li> <li>2. Place the steam water bowl in the center of the low rack on metal tray.</li> <li>3. After steaming, stand for 1 minute in the oven.</li> </ol>
St 12	Ham	0.10 - 0.60 kg	Steam cover Steam plate Steam water bowl Low rack Metal tray	Refrigerated	<ol style="list-style-type: none"> <li>1. Prepare sliced ham.</li> <li>2. Pour 300 ml tap water into the steam water bowl. Place the steam plate on the steam water bowl. Place the prepared food on the steam plate in a single layer. Cover with the steam cover.</li> <li>3. Place the steam water bowl in the center of the low rack on metal tray.</li> <li>4. After steaming, stand for 1 minute in the oven. - Under 2.5 cm(1 inch) thick</li> </ol>

**Note:** The cooking time may be adjusted by using the dial while the meal is cooking.

Steam Cover

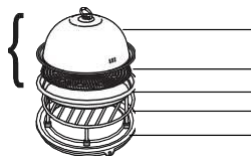

Steamer

Steam Plate  
Steam Water Bowl  
Low Rack  
Metal Tray

## **Auto Defrost**

*The temperature and density of food varies, I would recommend that the food is checked before cooking commences. Pay particular attention to large joints of meat and chicken, some foods should not be completely thawed before cooking. For example fish cooks so quickly that it is sometimes better to begin cooking while still slightly frozen. The BREAD programme is suitable for defrosting small items such as rolls or a small loaf. These will require a standing time to allow the center to thaw. In the following example I will show you how to defrost 1.4 Kg of frozen poultry.*


www.polotak.com



Your oven has four microwave defrost settings: - **MEAT, POULTRY, FISH** and **BREAD**; each defrost category has different power settings.


Press **START/Q-START**.

Items are about to defrost. Be certain to remove any metallic or plastic wraps; then place the food on microwave safe dish on the low rack on the metal tray and close the oven door.

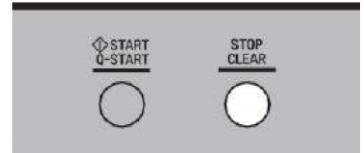

Press **Auto Defrost** (\*\*).


Turn **CONTROL** dial knob until display shows "dEF2".

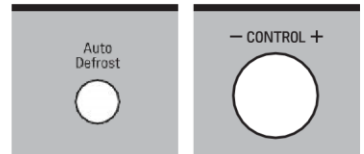


Press **Enter/Clock** for category confirmation.

Enter the weight of the frozen food that you are about to defrost.

Turn **CONTROL** dial knob until display shows "1.4 kg" for the weight of frozen food.

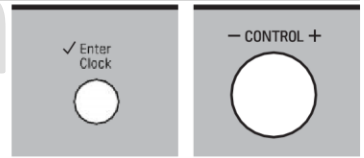

Press **START/Q-START**.

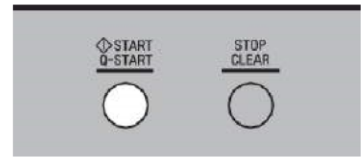

During defrosting your oven will "BEEP", at which point open the oven door, turn food over and separate to ensure even thawing. Remove any portions that have thawed or shield them to help slow down thawing. After checking close the oven door and press **START/Q-START** to resume defrosting.

**Your oven will not stop defrosting (even when the beep sounded) unless the door is opened.**

## Auto Defrosting Guide

- \*Food to be defrosted should be in a suitable microwave proof container and should be placed uncovered on the low rack on the metal tray.
- \*If necessary, shield small areas of meat or poultry with flat pieces of aluminum foil. This will prevent thin areas becoming warm during defrosting. Ensure the foil does not touch the oven walls.
- \*Separate items like minced meat, chops, sausages and bacon as soon as possible.  
**When BEEP, turn food over.** Remove defrosted portions. Continue to defrost remaining pieces. After defrosting, allow to stand until completely thawed.
- \*For example joints of meat and whole chickens should STAND for a minimum of 1 hour before cooking.

Category	Weight Limit	Utensil	Food
<b>Meat (dEF1)</b>	0.1 – 4.0 kg	Microwave ware (Flat plate), Low rack, Metal tray	<b>Meat</b> Minced beef, Fillet steak, Cubes for stew, Sirloin steak, Pot roast, Rump roast, Beef burger Lamb chops, Rolled roast, Sausage, Cutlets(2 cm) Turn food over at beep. After defrosting, let stand for 5-15 minutes.
<b>Poultry (dEF2)</b>			<b>Poultry</b> Whole chicken, Legs, Breasts, Turkey breasts(under 2.0 kg) Turn food over at beep. After defrosting, let stand for 20-30 minutes.

<b>Fish (dEF3)</b>			<b>Fish</b> Filletts, Steaks, Whole fish, Sea foods Turn food over at beep. After defrosting, let stand for 10-20 minutes.
<b>Bread (dEF4)</b>	0.1 – 0.5 kg	Paper towel or flat plate, Low rack, Metal tray	<b>Bread</b> Sliced bread, Buns, Baguette, etc.

## **More or Less**

*In the following example I will show you how to change the preset Speed Auto Cook programmes*

## **Cooking**

*for a longer or shorter cooking time.*




If you find that your food is over or undercooked when using the SPEED AUTOCOOK programme, you can increase or decrease cooking time by turning the **CONTROL** dial knob.

You can lengthen or shorten the cooking time (except defrost mode and odorize mode) by turning the **CONTROL** dial knob.

<b>Cooking</b>	<b>Increases or Decreases</b>
<b>0 ~ 3 min.</b>	<b>10 Sec.</b>
<b>3 ~ 20</b>	<b>30 Sec.</b>
<b>2 ~ 30</b>	<b>1 Min.</b>
<b>3 ~ 90</b>	<b>5 Min.</b>

Press **STOP/CLEAR**.

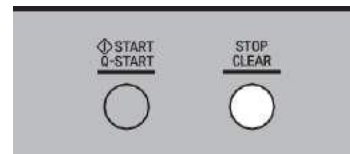


Select **SPEED AUTO COOK** programme.

\*See **SPEED AUTO COOK** mode.


Select weight of food.

Press **START/START**.

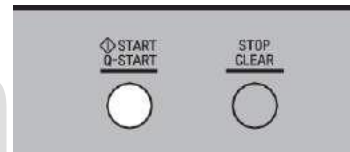

Turn **CONTROL** dial knob.

The cooking time will increase or decrease.

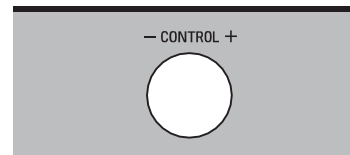




# Deodorize



The oven has a special function to remove the smell in the oven.


You can use the deodorize function without food in the oven.

Press **STOP/CLEAR**.

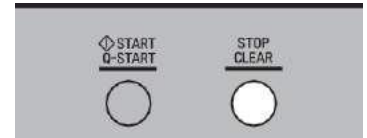


Turn **FUNCTION** dial to select deodorize (☼).

Press **Enter/Clock** for deodorize confirmation.

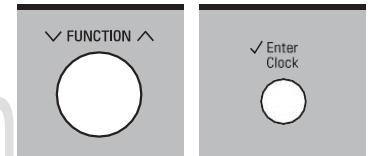

Press **START/Q-START**.

(Time counts down automatically)

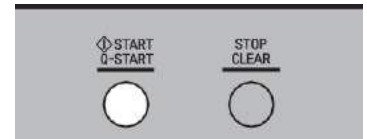

In the following example I will show you how to remove smell in the oven.

---

# ***Microwave-safe***

## **Utensils**

**Never use metal or metal trimmed utensils in using microwave function** Microwaves cannot penetrate metal. They will bounce off any metal object in the oven and cause arcing, an alarming phenomenon that resembles lightning. Most heat resistant non metallic cooking utensils are safe for use in your oven. However, some may contain materials that render them unsuitable as microwave cookware. If you have any doubts about a particular utensil, there's a simple way to find out if it can be used in using microwave function. Place the utensil in question next to a glass bowl filled with water in using microwave function. Microwave at power HIGH for 1 minute. If the water heats up but the utensil remains cool to the touch, the utensil is microwave~safe. However, if the water does not change temperature but the utensil becomes warm, microwaves are being absorbed by the utensil and it is not safe for use in using microwave function. You probably have many items on hand in your kitchen right now that can be used as cooking equipment in using microwave function. Just read through the following checklist.

### **Dinner plates**

Many kinds of dinner-ware are microwave-safe. If in doubt consult the manufacturer's literature or perform the microwave test.

### **Glassware**

Glassware that is heat-resistant is microwave-safe. This would include all brands of oven tempered glass cookware. However, do not use delicate glassware, such as tumblers or wine glasses, as these might shatter as the food warms.

### **Plastic storage containers**

These can be used to hold foods that are to be quickly reheated. However, they should not be used to hold foods that will need considerable time in the oven as hot foods will eventually warp or melt plastic containers.

[www.polotak.com](http://www.polotak.com)



---

Paper plates and containers are convenient and safe to use in using microwave function, provided that the cooking time is short and foods to be cooked are low in fat and moisture. Paper towels are also very useful for wrapping foods and for lining baking trays in which greasy foods such as bacon are cooked. In general, avoid coloured paper products as the colour may run. Some recycled paper products may contain impurities which could cause arcing or fires when used in using microwave function.

#### **Plastic cooking bags**

Provided they are made specially for cooking, cooking bags are microwave safe. However, be sure to make a slit in the bag so that steam can escape. Never use ordinary plastic bags for cooking in using microwave function, as they will melt and rupture.

#### **Plastic microwave cookware**

A variety of shapes and sizes of microwave cookware are available. For the most part, you can probably use items you already have on hand rather than investing in new kitchen equipment.

#### **Pottery, stoneware and ceramic**

Containers made of these materials are usually fine for use in using microwave function, but they should be tested to be sure.

### **CAUTION**

**Some items with high lead or iron content are not suitable for cooking utensils.**

**Utensils should be checked to ensure that they are suitable for use in using microwave function.**

www.polotak.com

---

**Keeping an eye on things**

www.polotak.com

The recipes in the book have been formulated with great care, but your success in preparing them depends on how much attention you pay to the food as it cooks. Always watch your food while it cooks. Your microwave function is equipped with a light that turns on automatically when the oven is in operation so that you can see inside and check the progress of your food. Directions given in recipes to elevate, stir, and the like should be thought of as the minimum steps recommended. If the food seems to be cooking unevenly, simply make the necessary adjustments you think appropriate to correct the problem.

#### **Factors affecting microwave cooking times**

Many factors affect cooking times. The temperature of ingredients used in a recipe makes a big difference in cooking times. For example, a cake made with ice-cold butter, milk, and eggs will take considerably longer to bake than one made with ingredients that are at room temperature. All of the recipes in this book give a range of cooking times. In general, you will find that the food remains undercooked at the lower end of the time range, and you may sometimes want to cook your food beyond the maximum time given, according to personal preference. The governing philosophy of this book is that it is best for a recipe to be conservative in giving cooking times. While overcooked food is ruined for good. Some of the recipes, particularly those for bread, cake, and custards, recommend that food be removed from the oven when they are slightly undercooked. This is not a mistake. When allowed to stand, usually covered, these foods will continue to cook outside of the oven as the heat trapped within the outer portions of the food gradually travels inward. If the food is left in the oven until it is cooked all the way through, the outer portions will become overcooked or even burnt. You will become increasingly skilful in estimating both cooking and standing times for various foods. **Density of food**

Light, porous food such as cakes and breads cook more quickly than heavy, dense foods such as roasts and casseroles. You must

take care when microwaving porous food that the outer edges do not become dry and brittle.

#### **Height of food**

The upper portion of tall food, particularly roasts, will cook more quickly than the lower portion. Therefore, it is wise to turn tall food during cooking, sometimes several times.

## ***Food characteristics & Microwave cooking***

#### **Moisture content of food**

Since the heat generated from microwaves tends to evaporate moisture, relatively dry food such as roasts and some vegetables should either be sprinkled with water prior to cooking or covered to retain moisture.

#### **Bone and fat content of food**

Bones conduct heat and fat cooks more quickly than meat. Care must be taken when cooking bony or fatty cuts of meat that they do not cook unevenly and do not become overcooked.

#### **Quantity of food**

The number of microwaves in your oven remains constant regardless of how much food is being cooked. Therefore, the more food you place in the oven, the longer the cooking time.

Remember to decrease cooking times by at least one third when halving a recipe.

# ***Food characteristics & Microwave cooking***

## **Shape of food**

Microwaves penetrate only about 2.cm into food, the interior portion of thick foods are cooked as the heat generated on the outside travels inward. Only the outer edge of food is cooked by microwave energy; the rest is cooked by conduction. The worst possible shape for a food that is to be microwaved is a thick square. The corners will burn long before the center is even warm . Round thin foods and ring shaped foods cook successfully in the microwave.

## **Covering**

A cover traps heat and steam which causes food to cook more quickly. Use a lid or microwave cling film with a corner folded back to prevent splitting.

## **Browning**

Meats and poultry that are cooked fifteen minutes or longer will brown lightly in their own fat. Food that are cooked for a shorter period of time may be brushed with a browning sauce such as worcestershire sauce, soy sauce or barbecue sauce to achieve an appetizing colour. Since relatively small amounts of browning sauces are added to food the original flavour of the recipe is not altered.

## **Covering with greaseproof paper**

Greaseproofing effectively prevents spattering and helps food retain some heat. But because it makes a looser cover than a lid or clingfilm, it allows the food to dry out slightly.

## **Arranging and spacing**

Individual foods such as baked potatoes, small cakes and hors d'oeuvres will heat more evenly if placed in the oven an equal distance apart, preferably in a circular pattern. Never stack foods on top of one another.

---

**Stirring**

www.polotak.com



Stirring is one of the most important of all microwaving techniques. In conventional cooking, food is stirred for the purpose of blending. Microwaved food, however, is stirred in order to spread and redistribute heat. Always stir from the outside towards the center as the outside of the food heats first.

#### **Turning over**

Large, tall foods such as roasts and whole chickens should be turned so that the top and bottom will cook evenly. It is also a good idea to turn cut up chicken and chops.

#### **Placing thicker portions facing outwards**

Since microwaves are attracted to the outside portion of food, it makes sense to place thicker portions of meat, poultry and fish to the outer edge of the baking dish. This way, thicker portions will receive the most microwave energy and the food will cook evenly.

#### **Shielding**

Strips of aluminium foil (which block microwaves) can be placed over the corners or edges of square and rectangular foods to prevent those portions from overcooking. Never use too much foil and make sure the foil is secured to the dish or it may cause „arcing“ in the oven.

#### **Elevating**

Thick or dense foods can be elevated so that microwaves can be absorbed by the underside and center of the foods.

#### **Piercing**

Foods enclosed in a shell, skin or membrane are likely to burst in the oven unless they are pierced prior to cooking. Such foods include yolks and whites of eggs, clams and oysters and whole vegetables and fruits.

#### **Testing if cooked**

Food cooks so quickly in a oven, it is necessary to test it frequently. Some foods are left in the microwave until completely cooked, but most foods, including meats and poultry, are removed

from the oven while still slightly undercooked and allowed to finish cooking during standing time. The internal temperature of foods will rise between 5°F (3°C) and 15°F (8°C) during standing time.

#### **Standing time**

Foods are often allowed to stand for 3 to 10 minutes after being removed from the oven. Usually the foods are covered during standing time to retain heat unless they are supposed to be dry in texture (some cakes and biscuits, for example). Standing allows foods to finish cooking and also helps flavour blend and develop.

## ***To Clean Your Oven***

### **1 Keep the inside of the oven clean**

Food spatters or spilled liquids stick to oven walls and between seal and door surface. It is best to wipe up spillovers with a damp cloth right away. Crumbs and spillovers will absorb microwave energy and lengthen cooking times. Use a damp cloth to wipe out crumbs that fall between the door and the frame. It is important to keep this area clean to assure a tight seal. Remove greasy spatters with a soapy cloth then rinse and dry. Do not use harsh detergent or abrasive cleaners. The metal tray can be washed by hand or in the dishwasher.

### **2 Keep the outside of the oven clean**

Clean the outside of your oven with soap and water then with clean water and dry with a soft cloth or paper towel. To prevent damage to the operating parts inside the oven, the water should not be allowed to seep into the ventilation openings. To

clean control panel, open the door to prevent oven from accidentally starting, and wipe a damp cloth followed immediately by a dry cloth. Press STOP/CLEAR after cleaning.

**3** If steam accumulates inside or around the outside of the oven door, wipe the panels with a soft cloth. This may occur when the oven is operated under high humidity conditions and in no way indicates a malfunction of the unit.

**4** The door and door seals should be kept clean. Use only warm, soapy water, rinse then dry thoroughly.  
DO NOT USE ABRASIVE MATERIALS, SUCH AS CLEANING POWDERS OR STEEL AND PLASTIC PADS.  
Metal parts will be easier to maintain if wiped frequently with a damp cloth.

**5** Do not use any steam cleaner.

**Q What's wrong when the oven light will not glow?**

A There may be several reasons why the oven light will not glow.  
Light bulb has blown  
Relay is failed

**Q Does microwave energy pass through the viewing screen in the door?**

A No. The holes, or ports, are made to allow light to pass; they do not let microwave energy through.

**Q Why does the beep tone sound when a button on the Control Panel is touched?**

A The beep tone sounds to assure that the setting is being properly entered.

**Q Will the microwave function be damaged if it operates empty?**

A Yes Never run it empty or without the metal tray.

**Q Why do eggs sometimes pop?**

A When baking, frying, or poaching eggs, the yolk may pop due to steam build up inside the yolk membrane. To prevent this, simply pierce the yolk before cooking. Never microwave eggs in the shell.

**Q Why is standing time recommended after microwave cooking is over?**

A After microwave cooking is finished, food keeps on cooking during standing time. This standing time finishes cooking evenly throughout the food. The amount of standing time depends on the density of the food.

---

[www.polotak.com](http://www.polotak.com)

---

***Questions &***  
Answers

[www.polotak.com](http://www.polotak.com)

---

**Q Is it possible to cook popcorn in this oven?**

[www.polotak.com](http://www.polotak.com)

A Yes, if using one of the two methods described below

- 1 Popcorn-popping utensils designed specifically for microwave cooking.
- 2 Prepackaged commercial microwave popcorn that contains specific times and power outputs needed for an acceptable final product.

FOLLOW EXACT DIRECTIONS GIVEN BY EACH MANUFACTURER FOR THEIR POPCORN PRODUCT. DO NOT LEAVE THE OVEN UNATTENDED WHILE THE CORN IS BEING POPPED. IF CORN FAILS TO POP AFTER THE SUGGESTED TIMES, DISCONTINUE COOKING. OVERCOOKING COULD RESULT IN THE CORN CATCHING FIRE.

**CAUTION**

NEVER USE A BROWN PAPER BAG FOR POPPING CORN. NEVER ATTEMPT TO POP LEFTOVER KERNELS.

**Q Why doesn't my oven always cook as fast as the cooking guide says?**

A Check your cooking guide again to make sure you've followed directions correctly, and to see what might cause variations in cooking time. Cooking guide times and heat settings are suggestions, chosen to help prevent

overcooking, the most common problem in getting used to a this oven. Variations in the size, shape, weight and dimensions of the food require longer cooking time. Use your own judgement along with the cooking guide suggestions to test food condition, just as you would do with a conventional cooker.

## ***Technical Specifications***

www.polotak.com

## Technical Specification

		<b>MA3884VC/MA3884NCR</b>
Power Input		230 V~ 50 Hz
Output		900 W (IEC60705 rating standard)
Microwave Frequency		2450 MHz
Outside Dimension		527 mm(W) X 395mm(H) X 469 mm(D)
Power Consumption:	Microwave	1650 watt
	Grill	max. 1600 watt
	Combination	max. 2800 watt
	Convection	2300 watt

- **Microwave Frequency : 2450 MHz +/- 50 MHz (Group 2 / Class B) \*\* Group 2 equipment: group 2 contains all ISM RF equipment in which radio-frequency energy in the frequency range 9 kHz to 400GHz is intentionally generated and used or only used, in the form of electromagnetic radiation, inductive and /or capacitive coupling, for the treatment of material or inspection/analysis purposes. Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.**

---

[www.polotak.com](http://www.polotak.com)



---

<https://www.polotak.com/>

[www.polotak.com](https://www.polotak.com/)